

User guide

BikeFlashBox BFX 1000



1. Description

The BikeFlashBox BFX 1000 sends optical signals by occuring events from devices that are paired with Bluetooth. Most common are smartphones and navigation systems. For example, voice announcements from a navigation system will send an optical signal and, therefore, you will not miss a turn. Incomming telephone calls or other messages from your smartphone will also be signaled through the blinking red LED. By using a compatible app also traffic warnings, such as "end of queue" or other important informations, will be signaled. It is possible to pair more the one device at the same time.

2. Technical Data

| dimensions: | 65 x 35 x 15 mm |
|--------------------------|--------------------------------|
| weight: | 35g |
| supply current max: | 100mA |
| supply voltage: | 5 – 15 VDC |
| cable length: | appr. 60 cm |
| connection: | USB typ A |
| compatibility: | Android from 4, iOS |
| display: | |
| | depending on ambient light |
| View angle of the red LE | ED |
| connectivity: | Bluetooth 4.1 audio |
| application: | . optoacustic signal converter |

3. Scope of delivery

- 1 x BFX 1000 with appr. 60cm cable
- 2 x cable straps, black, 280mm

4. Mounting

The device should be placed so that the middle LED is always in good sight. For fixing 2 cabel straps are included. Alternative it can be fixed with screws or i.e. a double sided adhesive tape. Connect the USB connector with your supply voltage, if neccessary use an adaptor.


Important: make sure the supply voltage is not above 15V!

5. Operation

The handling of the pairing porcess can vary according to your unit. Our example shows the handling process with a smartphone running on Android operating system.


5.1 Pairing


- connect the BFX 1000 USB connector with the supply voltage, the blue LED starts to blink
- activate Bluetooth on the smartphone:

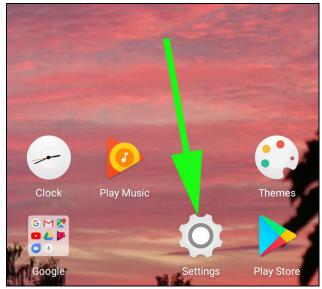

open settings



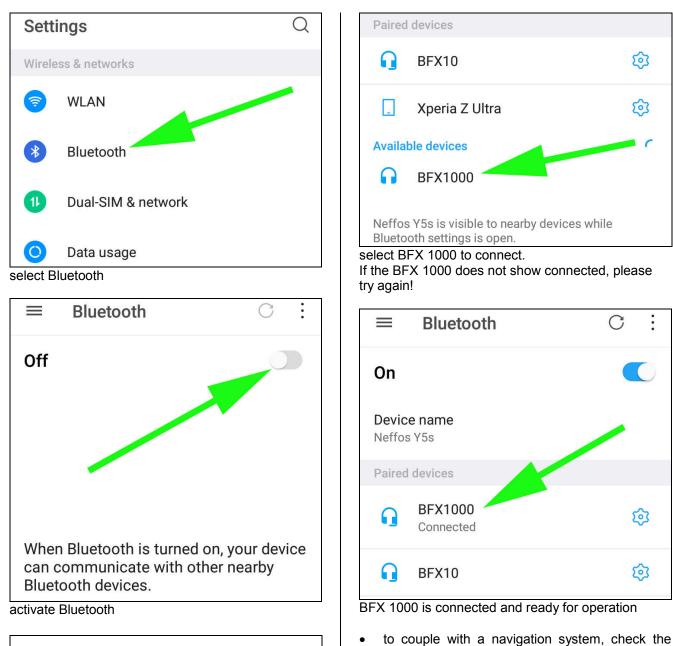

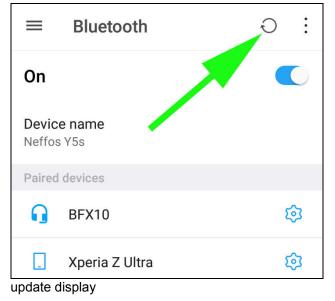

operating manual of the individual system.
an automatical start of a certain app during the connecting process can for example be achieved by using the app "Bluetooth Autoplay".



5.2 Display



- 1: blue LED
- 2: red LED
- 3: ambient light sensor

blue LED is blinking:

unit is not connected, but ready for pairing or connection.

red LED is blinking fast:


incomming message from the smartphone (WhatsApp / Instagramm / Twitter ...)


red LED is blinking slow:


telephone call to the smartphone or message from the navigation system.

5.3 Select messages

If you do not want to have all messages from your smartphone displayed, you can limit them:

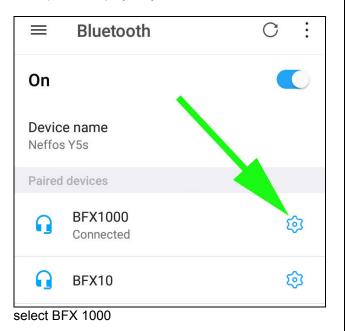

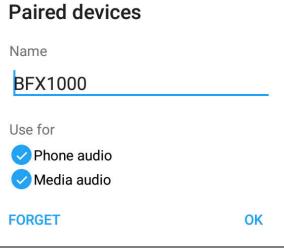

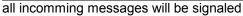

| Paired devices | |
|------------------------|----|
| Name | |
| BFX1000 | |
| Use for Phone audio | |
| Media audio | |
| FORGET | ок |

only telephone calls will be signaled

| Paired devices | |
|---------------------------------------|----|
| Name | |
| BFX1000 | |
| Use for Phone audio Media audio | |
| FORGET | ОК |

only messages from activated apps will be signaled